

**Welcome to Annaberg
Chalets.**

Short manual for the electronic door lock

08.12.2011

Dear Guests,

In case of questions or problems, do not hesitate to contact us.

Our phone number is +49-160-4727413 and we are always pleased to assist you.

In case you require assistance on site, please call Mrs. Schreder. Here phone number is +43-664-1150013.

We wish you a very pleasant stay.

Content

1. Main Door..... 3

1. Main Door

The house is equipped with an electronic door lock. You won't need a key. You will be informed about the access code in time.



How the door lock works is explained on the next page.

Operation:

For a better view, here the key pad in a large view. To unlock the main door, please press the lower right button (A). The system will be activated.

Now type in the code. The display shows *Bitte Drehknopf betätigen* – Please turn knob.

Turn the door knob:

- a) to the **left** - Chalet Annaberg, Nr. 87
- b) to the **right** - Chalet Donnerkogel, Nr. 86

to the stop limit and the door opens.



TSE Keypad FS

To lock the door from outside, please do it the same way. First type in the code, and then turn the door knob to the stop limit.

To lock the door from inside, just turn the door knob in the necessary direction.